

USB Microscope

“USB Shot”

User's Manual
for Windows

Table of Contents

Chapter 1 Introduction.....1

- 1-1 About This Manual1
- 1-2 Operating Environment.....1
- 1-3 Software Installation2

Chapter 2 Basic Operations3

- 2-1 Connecting the USB Microscope.....3
- 2-2 Starting USB Shot.....3
- 2-3 USB Shot Window.....4
- 2-4 Shooting Still Images5
- 2-5 Shooting Movies5
- 2-6 Interval Shooting.....6
- 2-7 Displaying Still Images.....6
- 2-8 Displaying Movies6
- 2-9 Displaying Sequential Still Images7
- 2-10 Displaying File Name and Shooting Date/Time7
- 2-11 Save Location for Still Images and Movies7
- 2-12 Selecting the Save Destination Folder8
- 2-13 Scrolling Thumbnails.....8
- 2-14 Deleting an Image from a Thumbnail8
- 2-15 Attaching a Memo.....9
- 2-16 Minimizing USB Shot.....9
- 2-17 Quitting USB Shot9

Chapter 3 Image Settings10

- 3-1 Setting dialog10
- 3-2 Example of color adjustment14

Chapter 4 Preferences.....22

- 4-1 Snap shot22
- 4-2 Movie shot.....23
- 4-3 Interval shot.....24
- 4-4 Resolution.....25

Chapter 1 Introduction

1-1 About This Manual

Thank you for purchasing our Scalar USB Microscope.

This manual explains the USB Shot application, which runs on a Windows-based PC when the USB Microscope is connected.

For those wishing to start using your USB Microscope right away, read Section 1.3, "Software Installation" and install the necessary software. After installing the software, read Chapter 2, "Basic Operations," which describes (in a sequential flow of actions) the procedures for taking still images and movies using USB Shot.

Once you are familiar with the procedures for shoot still images and movies, read Chapter 3, "Image Settings," and Chapter 4, "Preferences" Chapter 3 explains how to adjust hue and image quality, as well as other settings related to taking pictures. Chapter 4 explains how to set the file save directory, the file format of still images, and other settings.

1-2 Operating Environment

USB Shot and the USB Microscope operate in the following hardware and software environment.

Machine	PC with Pentium MMX or AMD K6 - 200MHz or better
Built-in memory	Minimum 32MB (80MB or more recommended)
Display capability	Monitor and PC capable of a minimum resolution of 800 x 600 (SVGA) at 24-bit or more color depth (True Color)
OS	Windows 98 / Windows 98 Second Edition Windows 2000 Professional / Windows Me The OS must be preinstalled in the PC at the factory before shipment. (Compatibility of this product is not guaranteed within upgraded environments.)

(Note)

If you are running early Windows 98(First Edition), fault may occur at the time of driver installation.

Please update your System to top shape by Custommer Service Pack (Microsoft).

Please refer :

<http://www.microsoft.com/windows98/downloads/default.asp>

- When multiple USB devices are connected to one PC, product compatibility is not guaranteed, depending on the types of USB devices being used simultaneously.
- Product compatibility is not guaranteed when using this product through a hub.
- Product compatibility is not guaranteed for all PCs operating in the specified operating environment.
- The operating environment and specifications of this product are subject to change without prior notice.
- The product names used in this manual are the brand names or registered trademarks of their respective companies.

1-3 Software Installation

Depending on how the OS is installed in your PC, the Installer may ask you to insert the CR-ROM containing the OS. Keep this CD-ROM on hand.

The driver must be installed first.

Plug the cable of the USB Microscope into the USB port on the PC main unit. The "Add New Hardware Wizard" appears in the window. Follow the instructions provided.

When the "What do you want Windows to do?" window appears, select "Display a list of..."



When the "Select the manufacturer and model..." window appears, insert the CD-ROM supplied with the USB Microscope into the CD-ROM drive, then click the [Have disk] button.



Next, designate the CD-ROM as the copy source of the distributed files and select [Driver] from the CD-ROM. ([pcam2.inf] appears in the list on the left.)



Once driver installation is completed, install the application.

Insert the CD-ROM supplied with the USB Microscope into the CD-ROM drive, then double-click the [Setup] icon(Computer icon).

After a while, the Installer will start up. Then specify the directory where you want the application installed, name of the program folder, and other information according to instructions appearing on the window.

When installation is completed normally, Restart your computer.

Chapter 2 Basic Operations

 
2-1 Connecting the USB Microscope

Plug the cable of the USB Microscope into the USB port on the PC main unit. Be sure to make this before starting USB Shot. Plugging or unplugging the USB cable after starting USB Shot will prevent the application from functioning properly.

Also before starting USB Shot, set the resolution of the monitor to 800 pixels (horizontal) by 600 pixels (vertical) or greater and color depth to 24-bit or more True Color.


2-2 Starting USB Shot

Click the [Start] button located at the lower-left corner of the window and select [USB Shot] from [Program] to start up USB Shot. (See Figure 1.)

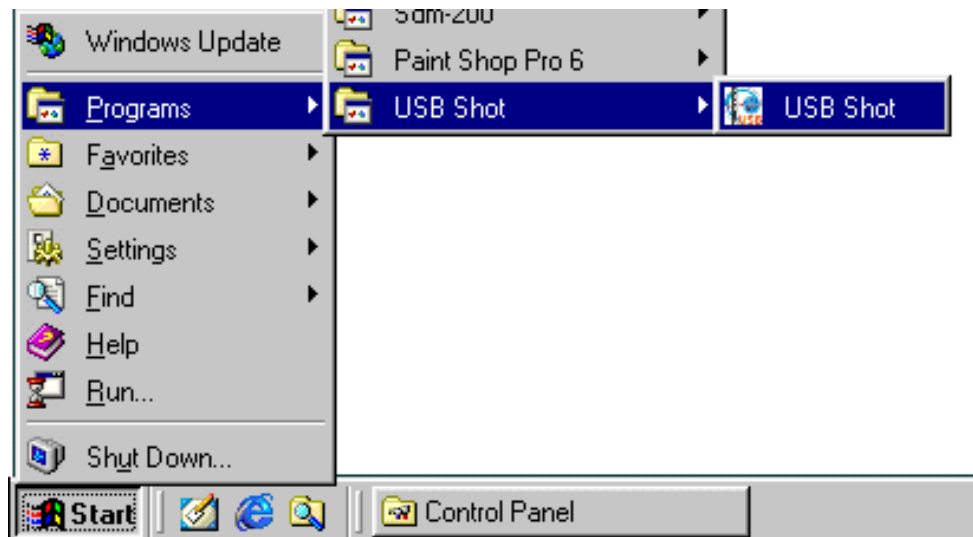

[Figure 1. Start menu]

 
If a warning dialog box (shown in Figure 2) appears on the window immediately after starting USB Shot, the USB Microscope may not be properly connected to the PC main unit, or the driver may not be installed properly. In this case, USB Shot will be immediately deactivated.

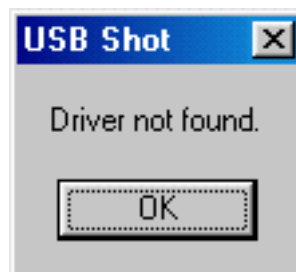

[Figure 2. Warning dialog]

2-3 USB Shot Window

 When USB Shot is started, a window (shown in Figure 3) will be displayed.

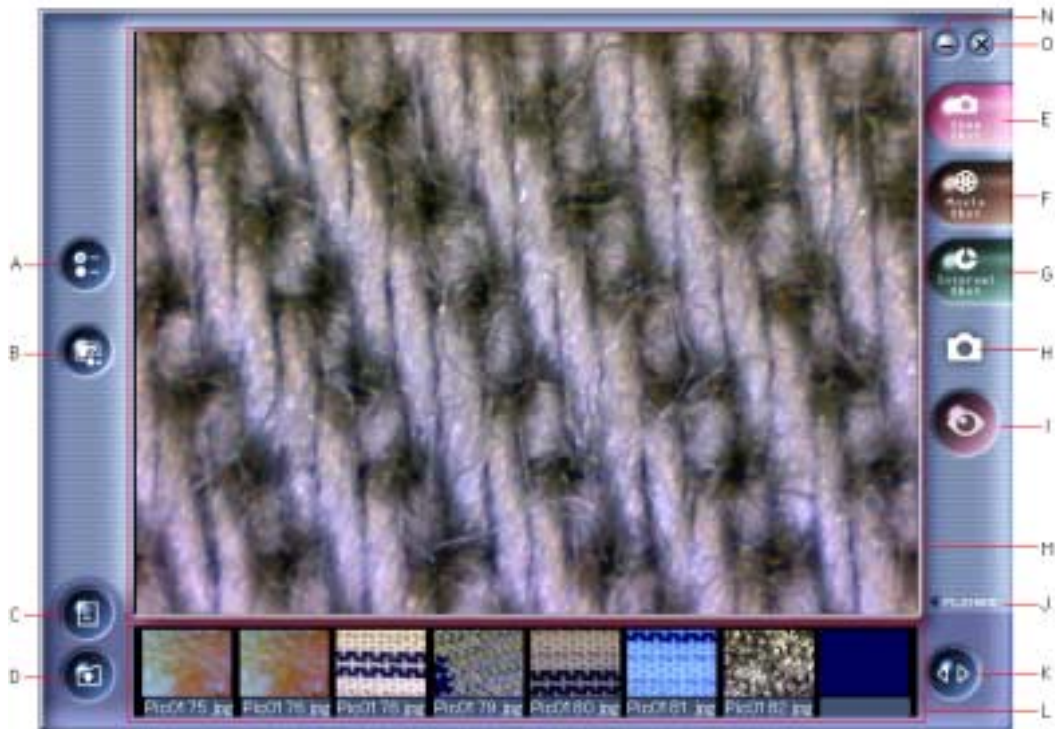

[Figure 3. USB Shot window]

- | | |
|---|---|
| - [Preferences] button (3-A) | Displays the Preferences dialog box. |
| - [Image setting] button (3-B) | Displays the image setting dialog box. |
| - [Thumbnail/Memo] selector button (3-C) | Switches the display area at the bottom of the window between thumbnails and memos. |
| - [Folder] selector button (3-D) | Displays the folder selection dialog box. |
| - [Snap shot mode] button (3-E) | Switches the capture mode to still images. |
| - [Movie shot mode] button (3-F) | Switches the capture mode to movies. |
| - [Interval shot mode] button (3-G) | Switches the capture mode to sequential still images. |
| - [Mode] icon (3-H) | Indicates the current capture mode. |
| - [Shoot] button (3-I) | Initiates shooting in the current capture mode. |
| - [File name display] selector button (3-J) | Displays the file names and shooting dates/times of images. |
| - [Scroll] button (3-K) | Scrolls thumbnails and memos. |
| - Thumbnail/Memo display area (3-L) | Area in which images in the thumbnails and memos attached to those images are displayed and/or edited. |
| - Microscope image display area (3-M) | This area displays in real time an image acquired through the USB Microscope or photograph selected in a thumbnail. |
| - [Minimize] button (3-N) | Minimizes USB Shot to the task bar. |
| - [Close] button (3-O) | Closes USB Shot. |

2-4 Shooting Still Images

An image displayed in the Capture window is saved as a still image file.

Click the [Snapshot] button on the right side of the window to switch the capture mode to Snapshot. This will change the mode icon shown on the center-right part of the window to [Snapshot]. (See Figure 4.)



[Figure 4. Snapshot icon]

Pressing the [Capture] button on the USB Microscope or clicking the [Shoot] button at the right side of the window saves the current image and adds it to a thumbnail at the bottom of the window.

Still images are saved at a size of 640 pixels (horizontal) by 480 pixels (vertical) at a color depth of 24-bit True Color.

Moreover, the file save format is JPEG (set when shipped from the factory). This format can be changed to BMP format in the Preferences. (See 4-1 for details.)


2-5 Shooting Movies

Images displayed in the Capture window are saved as a movie file. Click the [Movie Shot] button on the right side of the window to switch the capture mode to Movie Shot. This will change the mode icon at the center-right part of the window to [Movie Shot]. (See Figure 5.)



[Figure 5. Movie Shot icon]

 Pressing the [Capture] button on the USB Microscope or clicking the [Shoot] button on the right side of the window initiates image recording, and displays the image recording progress dialog box. (See Figure 6.)

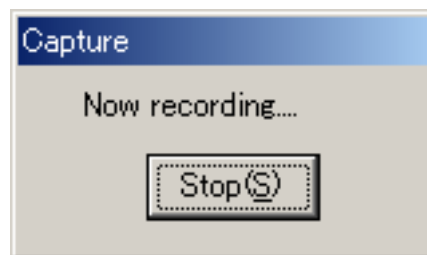

[Figure 6. Image recording progress dialog box]

Image recording ends when you click the [Stop] button in the image recording progress dialog box, or when the preset maximum recording time elapses. The first image is added to a thumbnail at the bottom of the window.

The maximum recording time can be specified in the Preferences. (See 4-2 for details.)

Movies are saved in a size of 320 pixels (horizontal) by 240 pixels (vertical) at 24-bit True Color depth.

The file save format is AVI.


2-6 Interval Shooting

Images displayed in the Capture window are shot sequentially and saved as a movie file. Click the [Interval Shot] button on the right side of the window to switch the capture mode to Interval Shot. This will change the mode icon shown on the center-right part of the window to [Interval Shot]. (See Figure 7.)



[Figure 7. Interval Shot icon]

 Pressing the [Capture] button of the USB Microscope or clicking the [Shoot] button on the right side of the window starts shooting still images at the specified interval, and displays the image recording progress dialog box. (See Figure 8.)

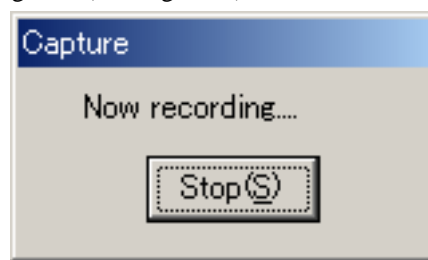

[Figure 8. Image recording progress dialog box]

Image recording ends when you click the [Stop] button in the image recording progress dialog box, or when the preset recording time elapses. The first image is added to a thumbnail at the bottom of the window.

The shooting interval and maximum shooting time can be specified in the Preferences. (See 4.3 for details.)

The sequential still images are saved as a movie file in AVI format.

The movies are saved in a size of 320 pixels (horizontal) by 240 pixels (vertical) at 24-bit True Color depth.

2-7 Displaying Still Images

Clicking an image shown in a thumbnail at the bottom of the window displays a still image of the image clicked.

Photographed still images are saved in JPEG or BMP file format (which can be switched in the Preferences)

Images can also be displayed using another application with a function to display JPEG or BMP files.

2-8 Displaying Movies

Clicking an image shown in a thumbnail at the bottom of the window displays the movie of the image clicked.

Use the three buttons that appear under the movie to reproduce, stop the movie.

The buttons (from left to right) activate Reproduce, Pause, Stop operations.

The movies are saved in AVI file format.

This reproduction can also be done using another application with a function to reproduce AVI files, such as Microsoft Media Player.

2-9 Displaying Sequential Still Images

Clicking an image shown in a thumbnail at the bottom of the window displays sequential still images of the image clicked.

Use the three buttons that appear under the movie to reproduce, stop the movie.

The buttons (from left to right) activate Reproduce, Pause, Stop operations.

The photographed still images are saved in AVI file format.

This reproduction can also be achieved using another application with a function to reproduce AVI files, such as Microsoft Media Player.

2-10 Displaying File Name and Shooting Date/Time

Clicking the [File name display] button at the lower-right part of the window displays the file name, shooting date, and time in the lower-right part of the Microscope image display area.

Clicking the [File name display] button again closes file name and shooting day/time display.

2-11 Save Location for Still Images and Movies

Photographed still images and movies are saved to the hard disk.

You can specify the save location to the hard disk can be specified in the folder selection dialog box. (See 2-12 for details.)

The product is shipped from the factory with the default save location set to the same directory as the USB Shot application.

Saved files are named in a format consisting of a 4-digit sequence number preceded by prefixes.

The application is shipped from the factory with the settings shown below.

The prefixes (e.g., "Pic," "Mov") can be changed in the Preferences. (See Chapter 4 for details.)

- Still images	"Pic" + Sequence Number	(e.g., Pic0001)
- Movies	"Mov" + Sequence Number	(e.g., Mov0001)
- Sequential still images	"Int" + Sequence Number	(e.g., Int0001)

[Caution]

 
A saved image file can be moved to any desired location (directory). An image file with a memo attached will lose the memo data, however, when its location is changed. Be aware of this when relocating an image file.

2-12 Selecting the Save Destination Folder

The folder for the save destination of photographed still images or movies is specified.

Clicking the [Folder selection] button at the lower-left part of the window displays the dialog box for selecting a folder. (See Figure 9.)

Select a folder and click the [OK] button. The folder for the save destination is then changed.

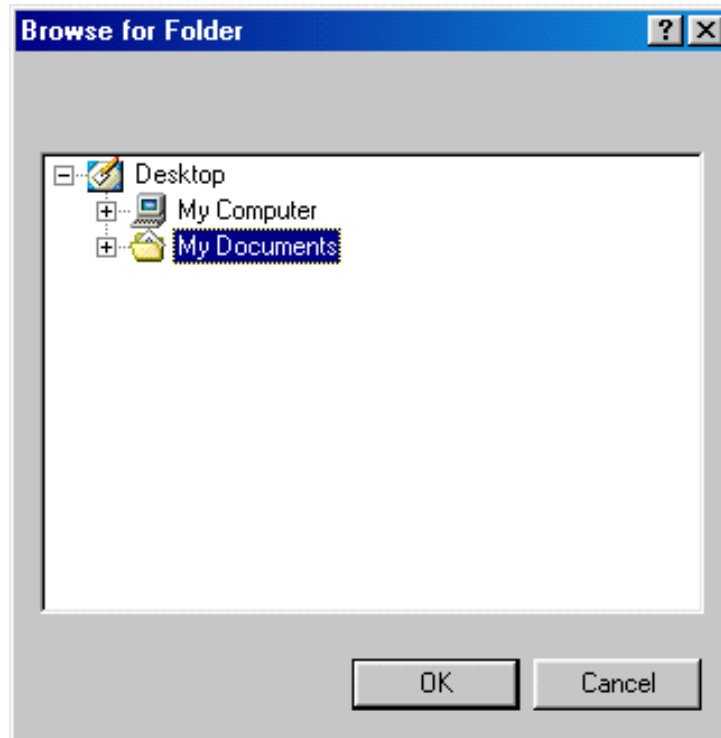

[Figure 9. Folder selection dialog box]

2-13 Scrolling Thumbnails


The thumbnails at the bottom of the window display eight images at the same time.

Clicking the [Scroll] button located at the lower- right part of the window scrolls through the thumbnails from right to left, thus showing the images hidden beyond the window.

2-14 Deleting an Image from a Thumbnail

Click an image displayed in a thumbnail at the bottom of the window, then click the [Delete] key. The deletion confirmation dialog box (shown in Figure 10) then appears.

 Clicking the [Yes] button there deletes the selected image.

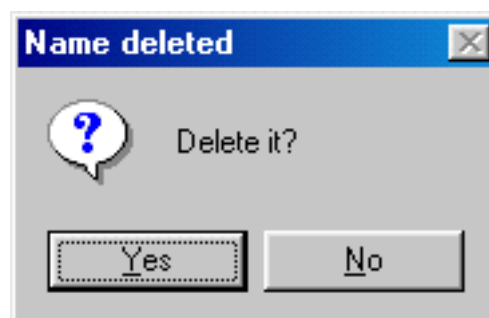

[Figure 10. Deletion confirmation dialog box]

2-15 Attaching a Memo

A memo (text) can be entered to accompany a photographed still image or movie.

Pressing the [Thumbnail/Memo] selector button at the lower- left part of the window converts the thumbnail part into a memo display/edit area. If the image already has a memo attached, its text will be displayed.

In the memo display/edit area, you can enter or edit text from the keyboard.

For text extending over several lines beyond the edit area, the entire memo can be scrolled up and down by using the [Scroll] button located on the right.

Once you have entered or edited a memo, click the [Thumbnail/Memo] selector button. The memo display/edit area will revert to thumbnails, and the memo entered will be defined.

2-16 Minimizing USB Shot

Clicking the [_] button at the upper-right part of the window moves USB Shot to the task bar .

Clicking the [USB Shot] button on the task bar displays the window again.

 
2-17 Quitting USB Shot

Clicking the [X] button at the upper-right part of the window quits USB Shot.

Chapter 3 Image Settings


3-1 Setting dialog

Clicking the [Image setting] button on the left side of the window displays the setup dialog .
The method of the color adjustment to the camera of a USB Microscope is explained.

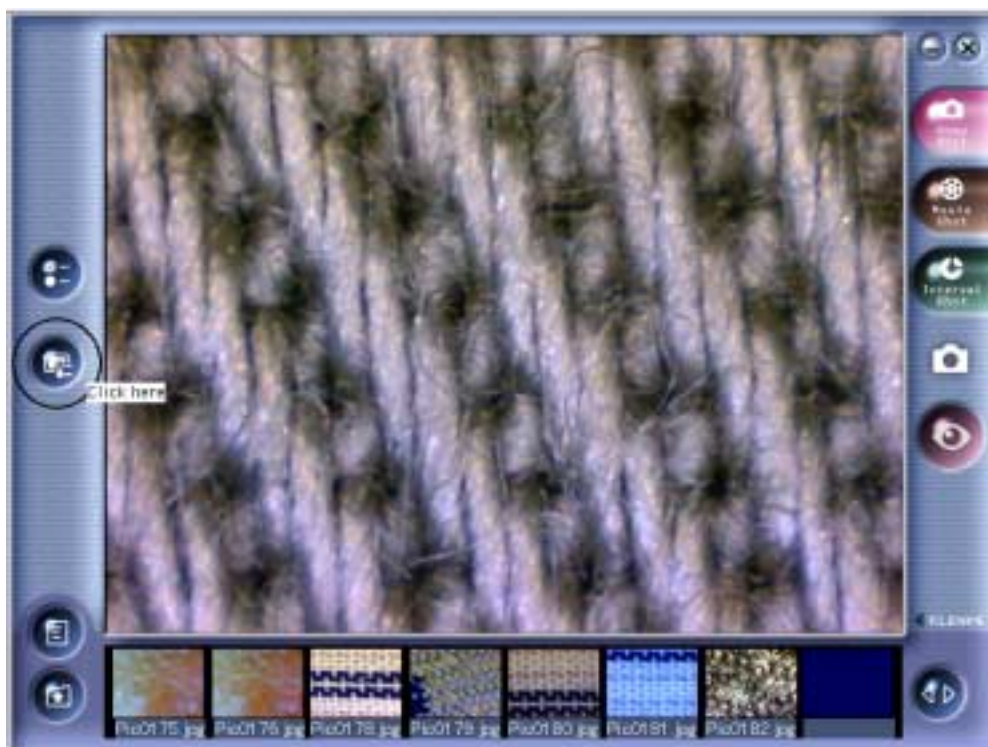

Please click the button of the above screen.

 The brightness of a camera is adjusted on the following screen.

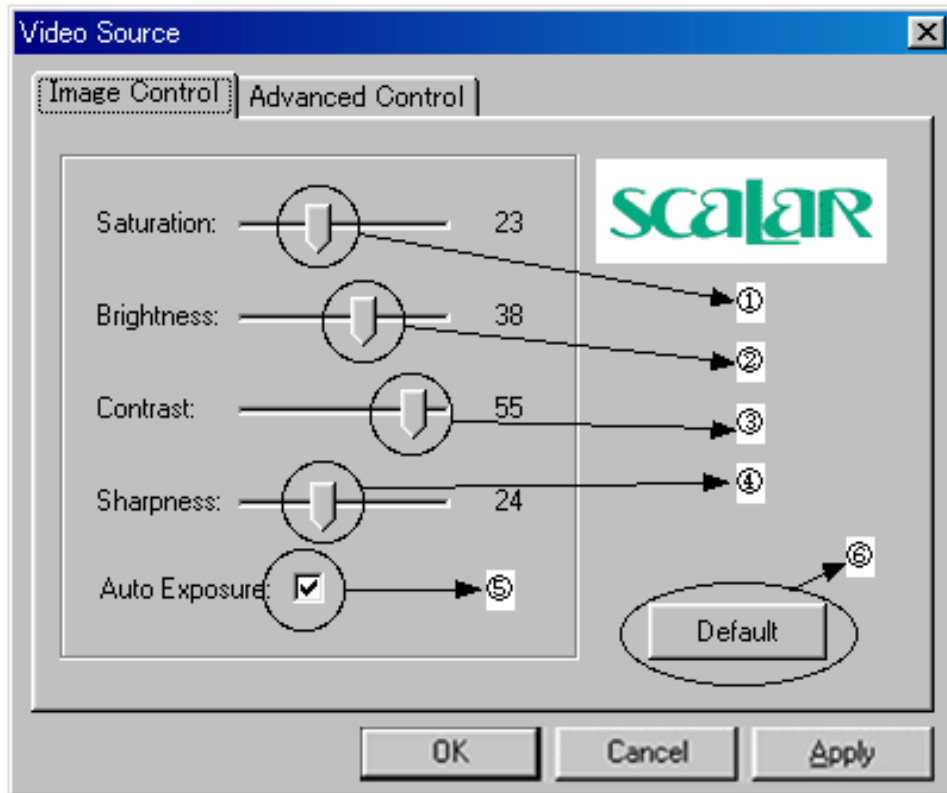

The above dialog is displayed. Each parameter is explained below.

(1) Saturation

The purity of a color is adjusted.

If it is made to slide rightward, the purity of a color will become high, and the purity of a color will become low if it is made to slide leftward.

It will become gray if purity is too low.

(2) Brightness

The brightness of a picture is adjusted.

If it is made to slide rightward, a screen and the whole picture will become whitish, and the whole will become dark if it is made to slide leftward.

It becomes effective when AutoExposure is turned on.

(3) Contrast

The contrast of a picture is adjusted.

If it is made to slide rightward, a highlight portion and a shadow portion will be emphasized and middle color gradation will decrease. If it is made to slide leftward, a middle tone will increase and it will become a flat screen.

(4) Sharpness

The degree of emphasis of a picture is adjusted.

If it is made to slide rightward, the degree of emphasis will become strong, and the degree of emphasis will become weak if it is made to slide leftward. If it strengthens too much, it will become the touch which spread, and it will become the blurred touch if it weakens too much.

(5) Auto Exposure

It is specification of automatic luminosity adjustment.

 
A check mark attaches or disappears by clicking.

Automatic luminosity adjustment is performed in the state where the check mark is attached.

(6) Default

If a button is pushed, it will return to the state at the time of installation.

The tone of a camera etc. is adjusted on the following screens.

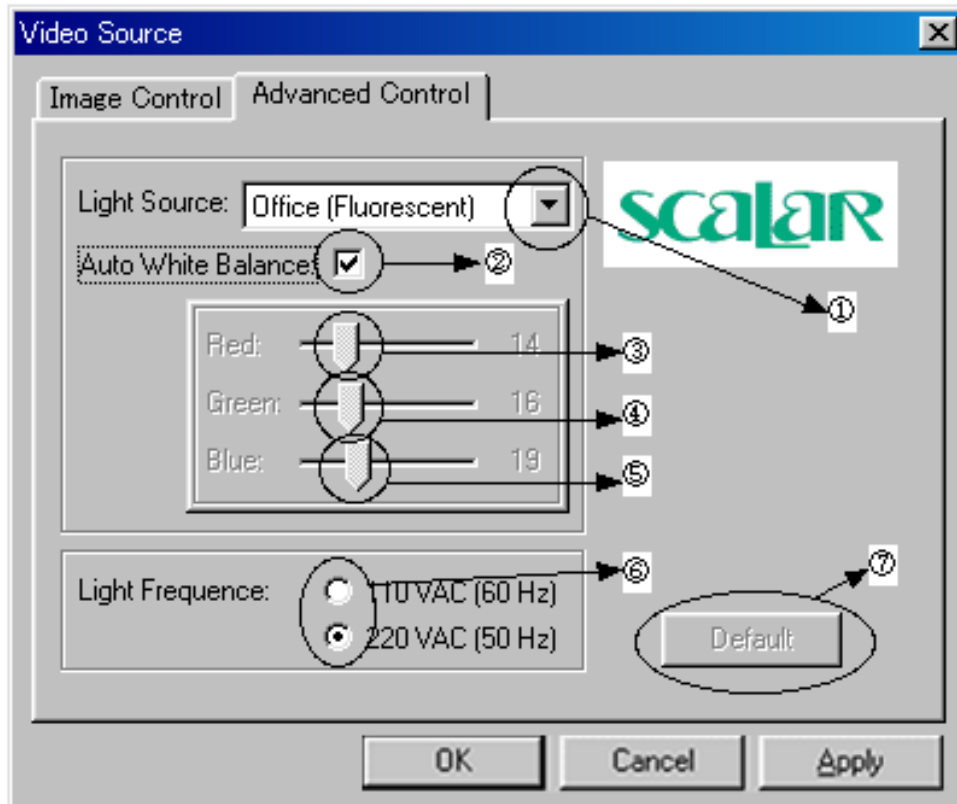

(1) Light Source

It chooses according to the environment to be used.

- Office: It chooses, in case it is used indoors.
- Home: It chooses, in case it is used indoors.
- Outdoors: It chooses, in case it is used outdoors.

(2) Auto White Balance

It is specification of automatic white level adjustment.

A check mark attaches or disappears by clicking.

Automatic white level adjustment is performed in the state where the check mark is attached.

(3) Red

A red level is adjusted.

If it is made to slide rightward, a red degree will become strong, and a red degree will become weak if it is made to slide leftward.

(4) Green

A green level is adjusted.

If it is made to slide rightward, a green degree will become strong, and a green degree will become weak if it is made to slide leftward.

(5) Blue

A blue level is adjusted.

If it is made to slide rightward, a blue degree will become strong, and a blue degree will become weak if it is made to slide leftward.

(6) Light Frequency

Optical synchronous frequency is set up.

In order to avoid optical synchronous frequency, such as a fluorescent light, it recommends checking to 220VAC(50Hz).

If optical synchronous frequency suits, flickering may occur on a picture.

 
(7) Default

If a button is pushed, it will return to the state at the time of installation.


3-2 The example of color adjustment

< Color adjustment in the case of seeing the skin >


First, a setting dialog is displayed.

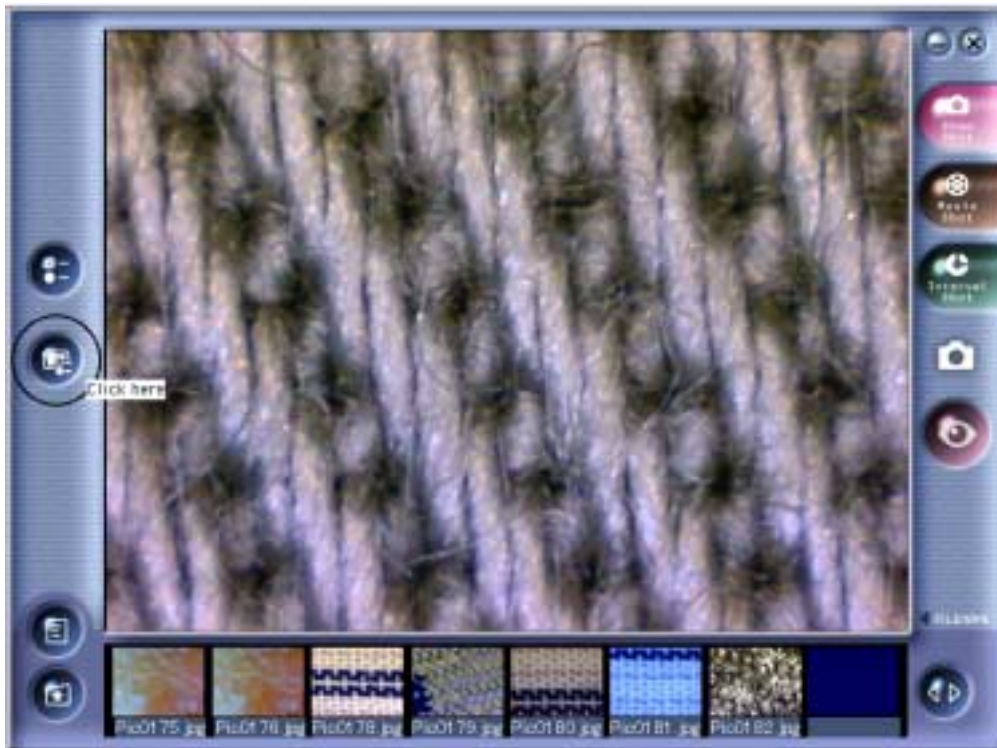

 
The button of the above screen is clicked.
The following dialogs are displayed.

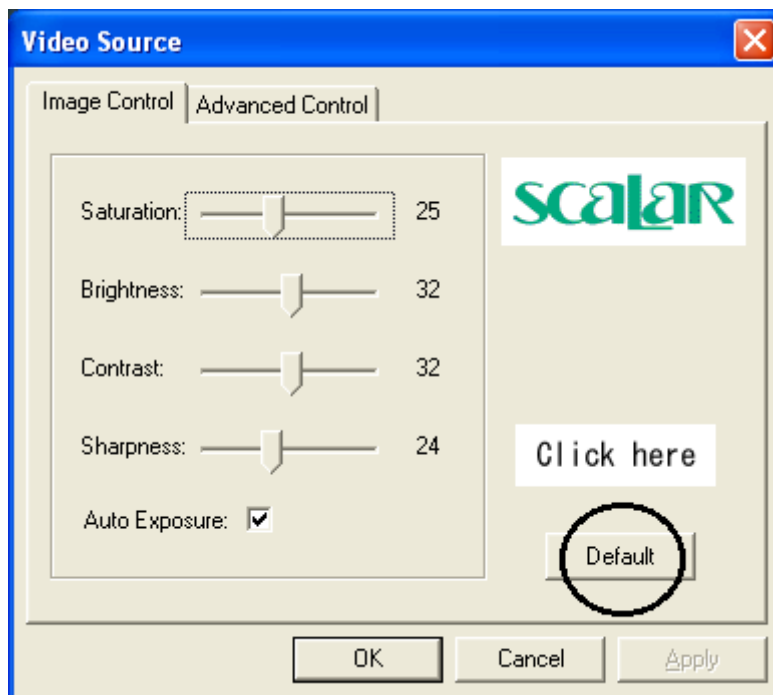


Click “**Default**” button.

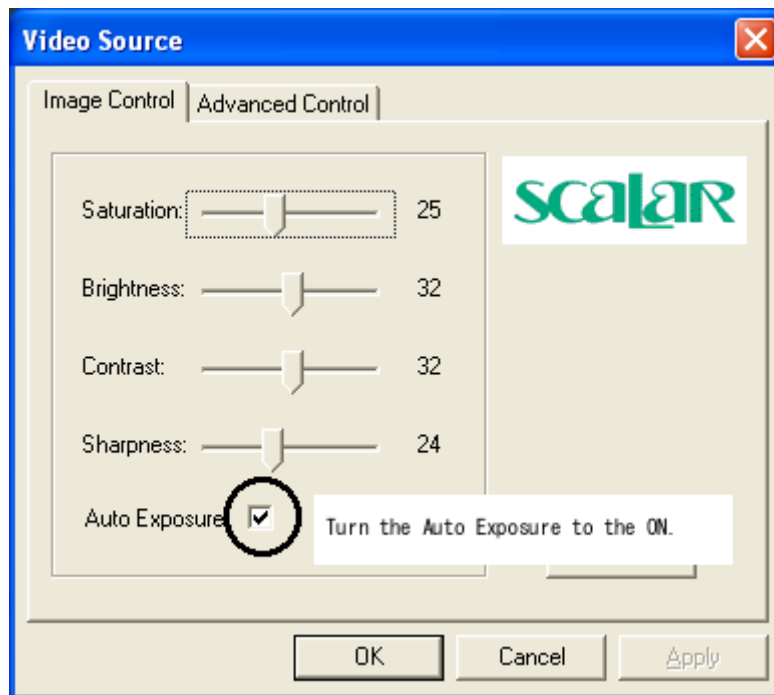 


Turn the check of "Auto Exposure".

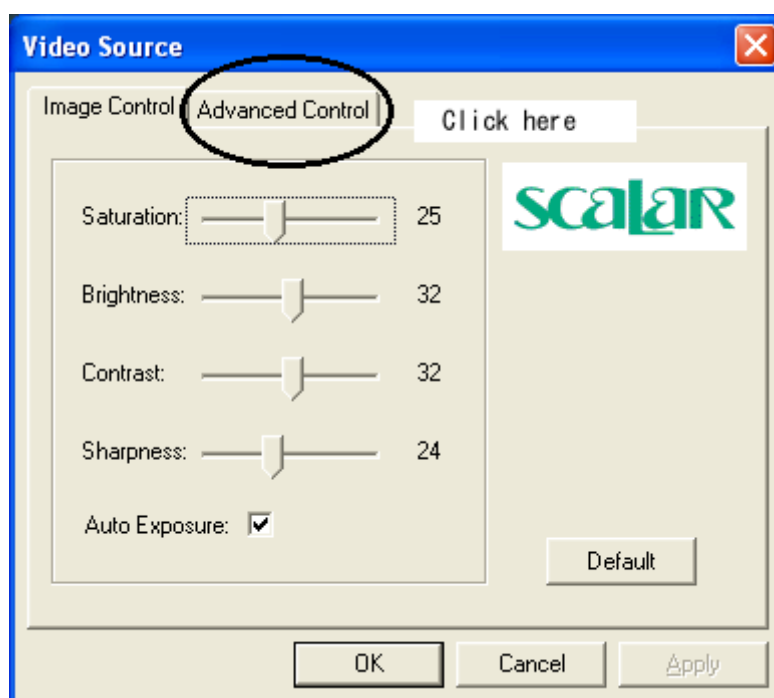 

Click "Advanced Control" tabs.

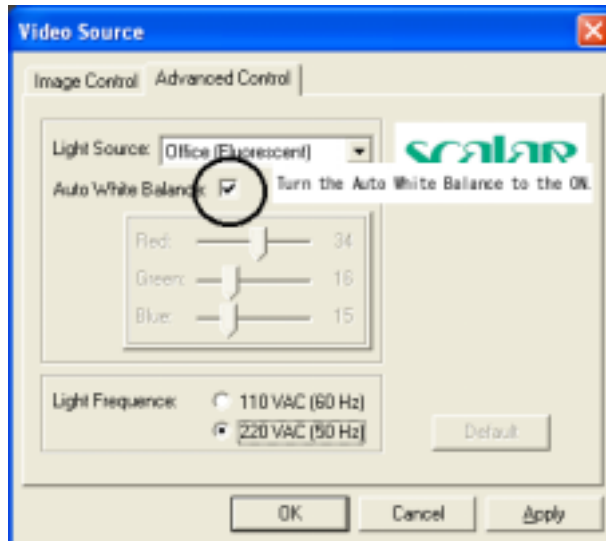 

 Turn the check of "**Auto White Balance**".

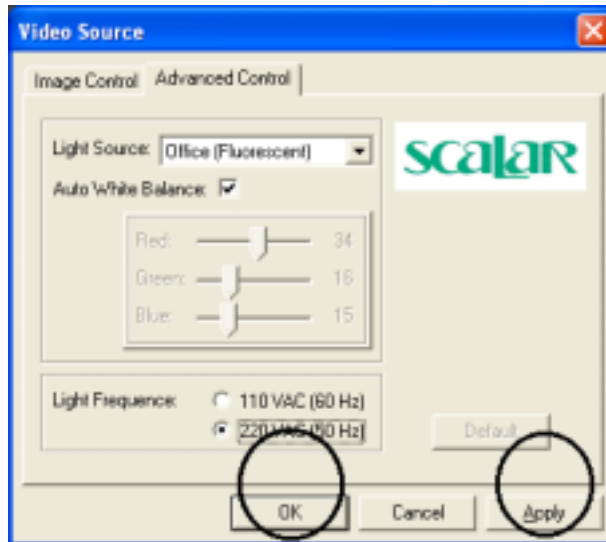

Click the "**Apply**" button, and click the "**OK**" button.



The **USB Shot** is finished.

Start up USB Shot under the following procedures.



1 Move the lamp switch of the camera to the **OFF** side.




2 Start up USB Shot again while you apply the camera to the white paper.




3 If the USB Shot has started up, move the lamp switch to the **A** side to turn on while you apply the camera to the object.

(The picture shows a case of the skin.)

 
An image control will be made while the camera is on.

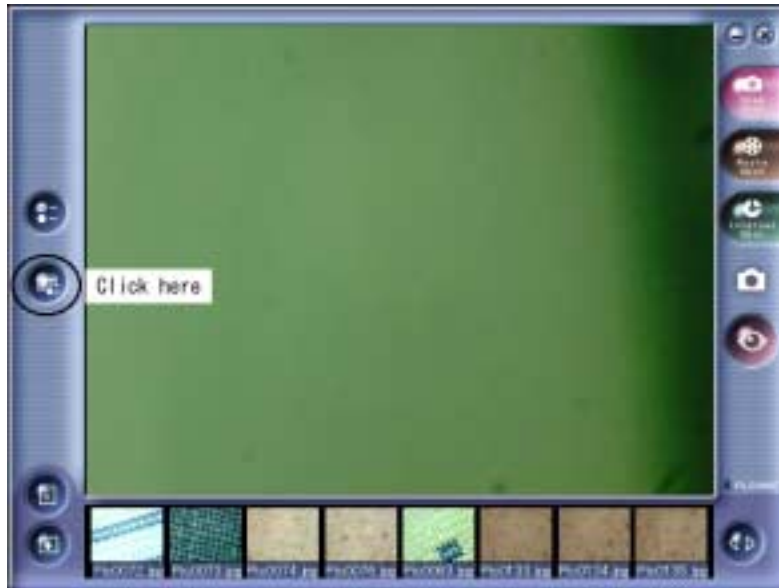


The Window shows the following dialogs.

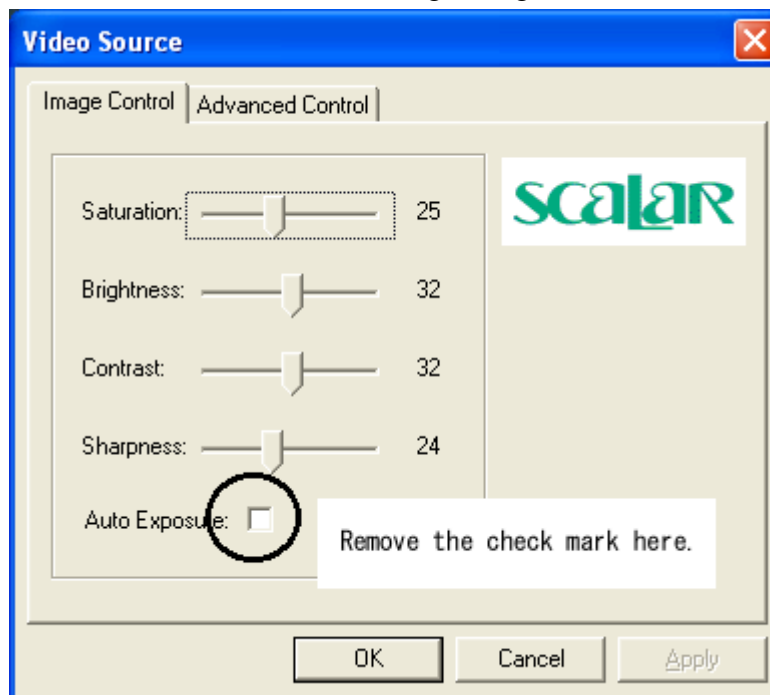 

 
Remove the check mark of Auto Exposure and turn it to Manual Exposure.

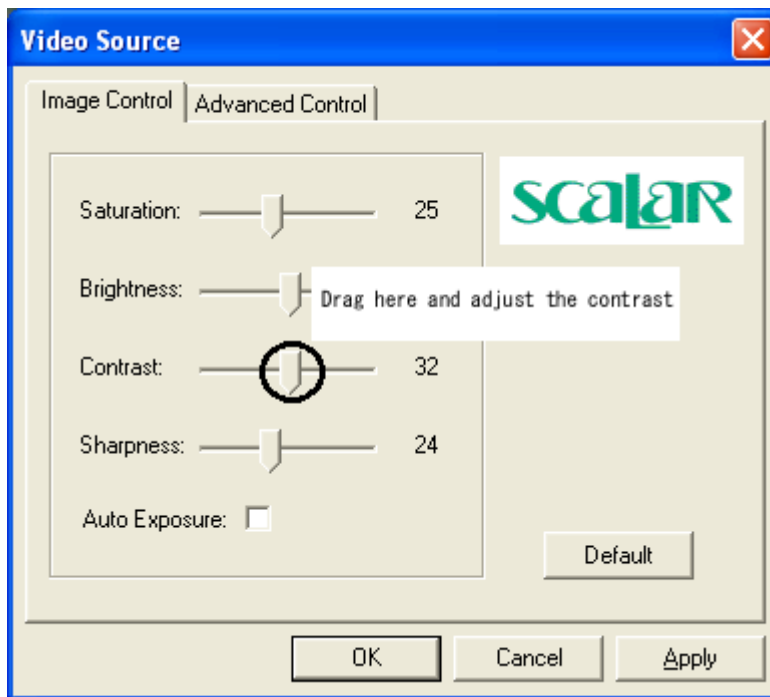

 
Adjust the contrast by watching the screen while you keep applying the camera to the object.

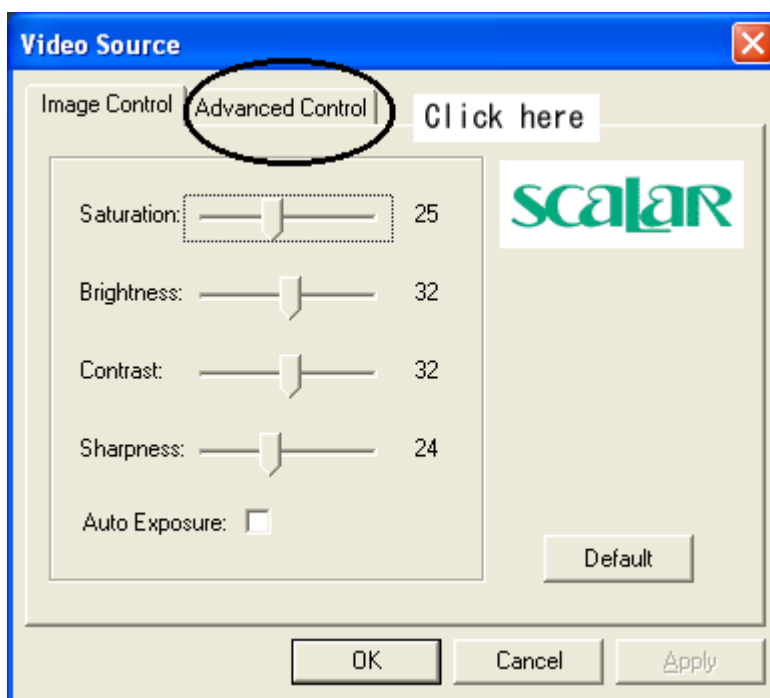

 
If you have adjusted the contrast, turn the dialog to “ Advanced Control.”

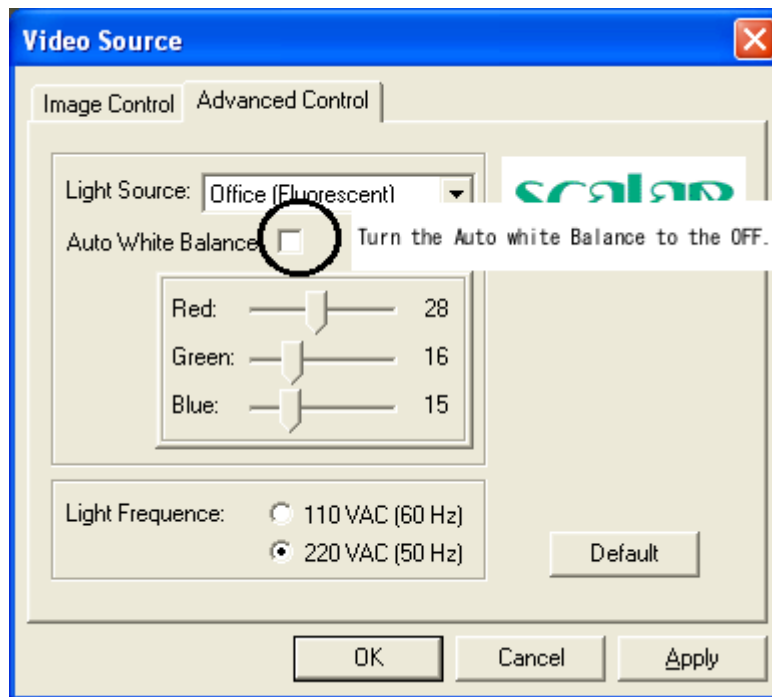

 Turn the auto white balance to the **OFF**.

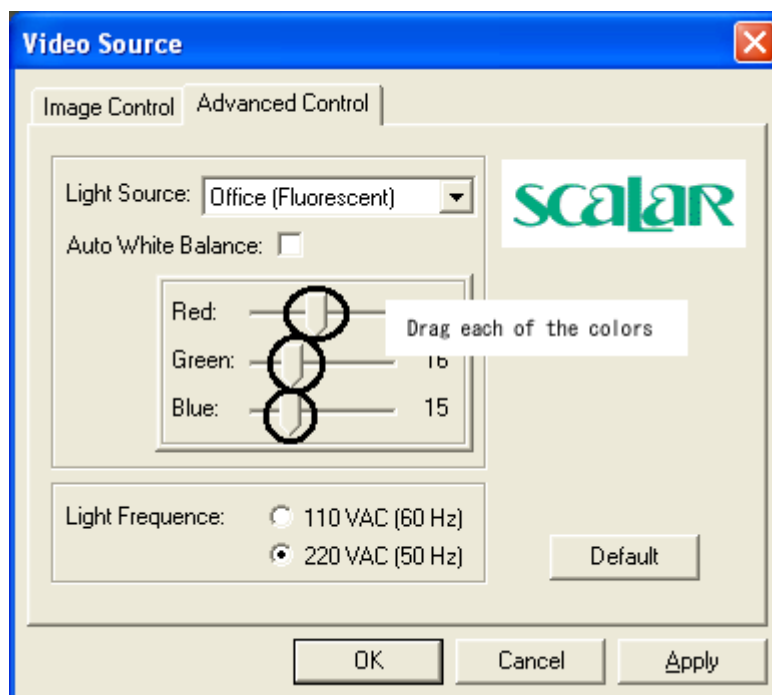

 Adjust the color of red, green and blue by **watching the screen** while you keep applying the camera to the object.

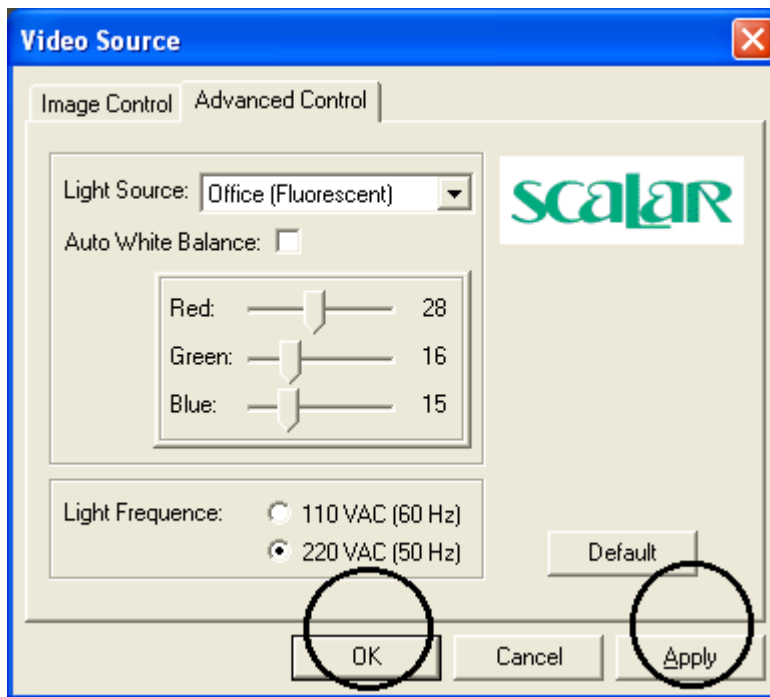

If you have adjusted the color, click "**Apply**" click "**OK**" and close the diagram.

This completes the adjustment of the image.

So long as you do not change this setting, you can use the same color for the similar objects. If you apply the unit to other objects, we recommend you to adjust the color in the same manner.

 
Chapter 4 Preferences

Clicking the [Preferences] button on the left side of the window displays the setup dialog box.
Select items from the three tabs in the dialog box to enter or change settings affecting shooting parameters.

4-1 Snap shot

Settings related to the shooting of still images are made here.

Set the prefixes of the saved file and its file format.

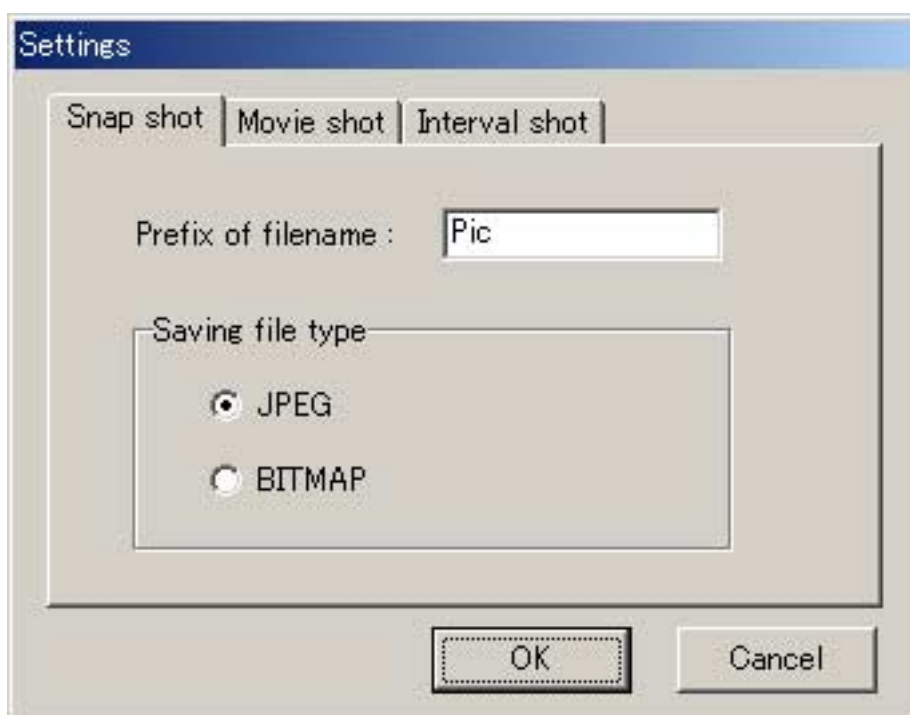

[Figure 12. [Snap shot] Tabs in setting dialog box]

- Prefix of filename
Specify the prefixes of the saved file (set to "pic" when shipped from the factory).
Up to eight half-size characters can be entered.
- Saving file type
Specify the format of the saved file (set to JPEG when shipped from the factory).
Select either JPEG or BITMAP.

4-2 Movie shot

Settings related to the shooting of movies are made here.
Set the prefixes of the saved file and the recording time.



[Figure 13. [Movie shot] Tabs in setting dialog box]

- Prefix of filename

Specify the prefixes of the saved file (set to "Mov" when shipped from the factory).
Up to eight half-size characters can be entered.

- Recording time

Specify the recording time (set to 10 sec when shipped from the factory).
A time period from one to 999 seconds can be entered.

4-3 Interval shot

Settings related to interval shooting are made here.

Set the prefixes of the saved file, shooting intervals, and other necessary information.




[Figure 14. [Interval shot] Tabs in setting dialog box]

- Prefix of filename
Specify the prefixes of the saved file (set to "Int" when shipped from the factory).
Up to eight half-size characters can be entered.
- Recording count
Specify the number of shots (set to 10 shots when shipped from the factory).
A number of one to 999 shots can be entered.
- Recording Interval
Specify the shooting interval (set to one minute when shipped from the factory).
Enter the interval in units of hours, minutes, and seconds (from left to right).
- Recording time
Displays the total recording time (no entry is permitted).
This time is calculated by multiplying the number of shots by the shooting interval.

4-4 Resolution

 The resolution of a still picture image is set up.

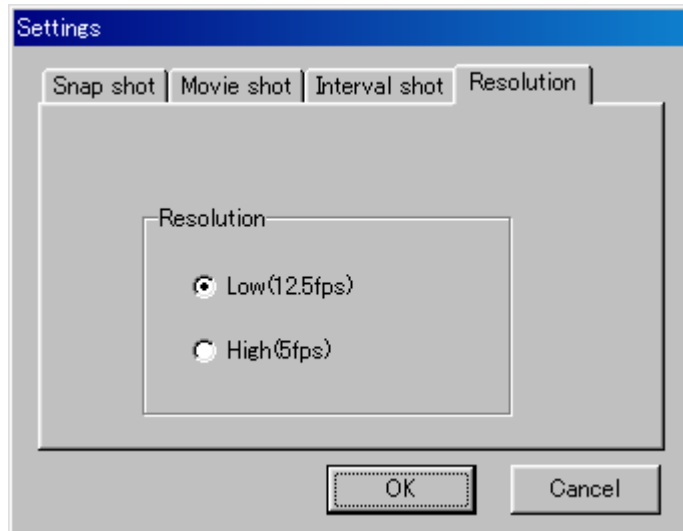

[Figure 15 [Resolution] Tabs in setting dialog box]

- Low(12.5fps)

Setup of 12.5frame/second, resolution of a still picture, it is low.
(setting value when shipped from the factory)

- High(5fps)

Setup of 5frame/second, resolution of a still picture, it is high.
Then the display of an animation becomes slow.

Scalar USB Microscope “USB Shot” User’s Manual for Windows

January 1, 2001 first edition

September 3, 2001 second edition

January 25, 2002 third edition

Copyright by SCALAR Corporation. All rights reserved.